



SOUNDSORY®


About

SoundSory® is a sound based intervention embedded in a proprietary headphone equipped with Bone Conduction to develop sensory integration and establish core foundations. The specific rhythmic music is electronically processed to stimulate body movement and highlight the Attention Mechanisms in the brain as well as all cognitive functions. SoundSory is a 20 hours program delivered in only 40 days through 30 minutes sessions. Each day includes around 25 minutes of modified Music and maximum 5 minutes of Movement exercises. The program can be repeated for a deeper integration.

Part description



Accessories

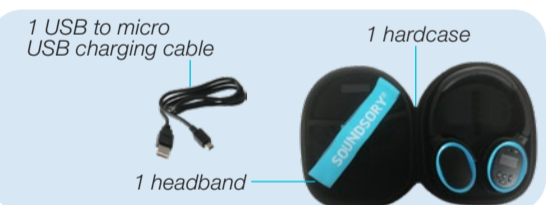

Features

- Power on/off - Play/pause - Backwards/Forwards - Volume up/down
- Bluetooth mode / TF = SD card mode / Program mode
- Battery status on the screen and battery low signal (2 seconds of 4 bips every 10 minutes)
- Program in TF mode : Day named from 1.1 to 40.2
- Track name and remaining playing time of track
- Automatic switch off without Bluetooth connection for 10 minutes

How to wear it



How to charge

Connect SoundSory to a standard USB port on your PC or a wall charger via the USB charging cable. SoundSory will fully charge within around 4 hours. The bar indicator will show a bar movement when charging and will turn fixed charging bars when charging is completed.

Charge Indication

Representation	Status
1 bar	Low battery. Headphone should be charged
4 flashing bars	Headphone is in charge
4 fixed bars	Headphone is full charged

Troubleshooting

Issue	Possible Problem	Resolution
Does not turn on	Check if the battery is fully charged	Charge the battery
Do not hear sound	Check the volume status	Switch the device off and on again to reset the default volume
Sound is too loud	Check the volume level	Decrease the volume by using volume + -> button or switch off and on the device.

Specifications

Model	TS1 bluetooth stereo headphone
Speaker	Diameter 40mm Impedance 32 ohm sensitivity 115db+/-3db SPL @1Khz
Response frequency	20-20KHz
Microphone	Microphone diameter 4.5*2.2 mm impedance 2.2K
Bone Conduction	Dual suspension BC. Sensitivity 100 +/- 3db
Wireless	Bluetooth 2.1 + EDR spec
Operation	10 meters (33ft)
Battery	Polymer lithium battery 3.7V/1000mAh - 4 hours charging time
Playing time	10 hours on SD card

Storage and maintenance

- Store the headset in cool and dry place. The working temperature should be 0-45°C (32-113°F). Working in cold/hot environment or highly humid area will reduce the battery life.
- After storage for a long period, please charge the headset before using again.
- The headset is not water resistant. Do not put the headset into water.
- Clean the headset with a soft dry cloth.
- Do not bring the headset into contact with any sharp object.
- Do not leave the headset to extremely high or low temperature.

Note:


Design and specifications are subject to change without notice. For more information on the product, please visit www.soundSory.com

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Where is the serial code?

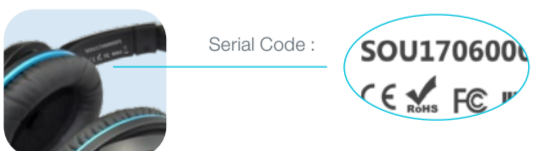

Precaution of use, limitations and disclaimer

SoundSory volume is set by default at a comfortable level for a majority of people. Feel free to adjust the volume for your comfort but do not turn it up too high. Children must use SoundSory under constant adult supervision and instruction. Do not use SoundSory more than 30 minutes a day. If you feel pain or discomfort, immediately stop using it. Resume using SoundSory once you feel well again. SoundSory is an electronic device, use it carefully. SoundSory is a pedagogical device. It is not approved by Federal Drug Administration. It cannot be considered as a medical device.

How to contact us?

SOUND FOR LIFE LTD
Unit 507, 5/F,
Chinachem Golden Plaza, 77 Mody Road,
Tsim Sha Tsui East, Kowloon, Hong Kong

Note:

If you need to return a product under warranty, please send a detailed explanation of the problem to info@soundSory.com and wait for the instructions.



SOUNDSORY®


About

SoundSory® est une intervention basée sur le son intégrée dans un casque propriétaire équipé de la Conduction Osseuse pour développer l'intégration sensorielle et établir des bases fondamentales. La musique rythmique spécifique est traitée électroniquement pour stimuler le mouvement corporel et mettre en évidence les Mécanismes de l'Attention dans le cerveau ainsi que toutes les fonctions cognitives. SoundSory est un programme de 20 heures délivré en seulement 40 jours à travers 30 minutes de sessions. Chaque jour comprend environ 25 minutes de musique modifiée et un maximum de 5 minutes d'exercices de mouvement. Le programme peut être répété pour une intégration plus profonde.

Description de l'équipement



Accessories

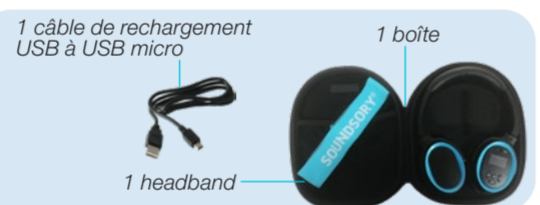

Composantes

- Power on/off - Play/pause - Backwards/Forwards - Volume up/down
- Bluetooth mode / TF = SD card mode / Program mode
- Battery status on the screen and battery low signal (2 seconds of 4 bips every 10 minutes)
- Program in TF mode : Day named from 1.1 to 40.2
- Track name and remaining playing time of track
- Automatic switch off without Bluetooth connection for 10 minutes

Comment le porter



Comment le recharger

Connect SoundSory to a standard USB port on your PC or a wall charger via the USB charging cable. SoundSory will fully charge within around 4 hours. The bar indicator will show a bar movement when charging and will turn fixed charging bars when charging is completed.

Voyant lumineux LED

Representation	État
1 bar	Low battery. Headphone should be charged
4 flashing bars	Headphone is in charge
4 fixed bars	Headphone is full charged

Dépannage

Problème	Origine possible	Résolution
Ne s'allume pas	Vérifiez si la batterie est complètement chargée	Chargez la batterie
Do not hear sound	Check the volume status	Switch the device off and on again to reset the default volume
Le volume est trop fort	Check the volume level	Decrease the volume by using volume + -> button or switch off and on the device.

Caractéristiques techniques

Model	TS1 bluetooth stereo headphone
Speaker	Diameter 40mm Impedance 32 ohm sensitivity 115db+/-3db SPL @1Khz
Response frequency	20-20KHz
Microphone	Microphone diameter 4.5*2.2 mm impedance 2.2K
Bone Conduction	Dual suspension BC. Sensitivity 100 +/- 3db
Wireless	Bluetooth 2.1 + EDR spec
Operation	10 meters (33ft)
Battery	Polymer lithium battery 3.7V/1000mAh - 4 hours charging time
Playing time	10 hours on SD card

Stockage et maintenance

- Gardez le casque dans un endroit frais et sec. La température de fonctionnement doit être 0-45°C (32-113°F). Travailler dans un environnement chaud/froid ou dans une zone très humide réduira la durée de vie de la batterie.
- Après un stockage prolongé, recharger le casque avant de l'utiliser.
- Le casque n'est pas résistant à l'eau. Ne mettez pas le casque sous l'eau.
- Nettoyez le casque avec un chiffon doux et sec.
- Évitez le contact avec des objets pointus.
- N'exposez pas le casque à des températures extrêmement élevées ou basses.

Note:


La conception et les caractéristiques techniques sont sujettes à des changements sans préavis. Pour plus d'informations sur le produit, visitez www.soundSory.com

Avertissement FCC

Cet appareil répond aux exigences de la Section 15 de la réglementation FCC. Son fonctionnement est soumis aux deux conditions suivantes :

- (1) cet appareil ne doit pas causer d'interférences nuisibles, et
- (2) cet appareil doit accepter toute autre interférence reçue, y compris les interférences pouvant entraîner un fonctionnement non désiré

Où se trouve le code de série?

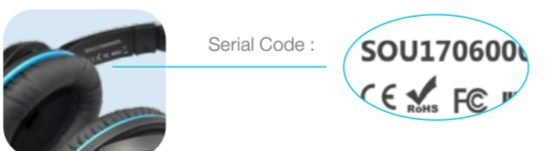

Précautions d'emploi, limites et clause de non-responsabilité

SoundSory volume is set by default at a comfortable level for a majority of people. Feel free to adjust the volume for your comfort but do not turn it up too high. Children must use SoundSory under constant adult supervision and instruction. Do not use SoundSory more than 30 minutes a day. If you feel pain or discomfort, immediately stop using it. Resume using SoundSory once you feel well again. SoundSory is an electronic device, use it carefully. SoundSory is a pedagogical device. It is not approved by Federal Drug Administration. It cannot be considered as a medical device.

Comment nous contacter?

SOUND FOR LIFE LTD
Unit 507, 5/F,
Chinachem Golden Plaza, 77 Mody Road,
Tsim Sha Tsui East, Kowloon, Hong Kong

À noter:

If you need to return a product under warranty, please send a detailed explanation of the problem to info@soundSory.com and wait for the instructions.



SOUNDSORY®

About

SoundSory® is a sound based intervention embedded in a proprietary headphone equipped with Bone Conduction to develop sensory integration and establish core foundations. The specific rhythmic music is electronically processed to stimulate body movement and highlight the Attention Mechanisms in the brain as well as all cognitive functions. SoundSory is a 20 hours program delivered in only 40 days through 30 minutes sessions. Each day includes around 25 minutes of modified Music and maximum 5 minutes of Movement exercises. The program can be repeated for a deeper integration.

Descripción



Accesorios



Características

- Power on/off - Play/pause - Backwards/Forwards - Volume up/down
- Bluetooth mode / TF = SD card mode / Program mode
- Battery status on the screen and battery low signal (2 seconds of 4 bips every 10 minutes)
- Program in TF mode : Day named from 1.1 to 40.2
- Track name and remaining playing time of track
- Automatic switch off without Bluetooth connection for 10 minutes

Cómo ponérselo



Cómo recargar

Connect SoundSory to a standard USB port on your PC or a wall charger via the USB charging cable. SoundSory will fully charge within around 4 hours. The bar indicator will show a bar movement when charging and will turn fixed charging bars when charging is completed.

Indicación con LED

Representation	Estado
1 bar	Low battery. Headphone should be charged
4 flashing bars	Headphone is in charge
4 fixed bars	Headphone is full charged

Localización y resolución de problemas

Issue	Possible Problem	Resolution
Does not turn on	Check if the battery is fully charged	Charge the battery
Do not hear sound	Check the volume status	Switch the device off and on again to reset the default volume
Sound is too loud	Check the volume level	Decrease the volume by using volume + -> button or switch off and on the device.

Specifications

Model	TS1 bluetooth stereo headphone
Speaker	Diameter 40mm Impedance 32 ohm sensitivity 115db+/-3db SPL @1Khz
Response frequency	20-20KHz
Microphone	Microphone diameter 4.5*2.2 mm impedance 2.2K
Bone Conduction	Dual suspension BC. Sensitivity 100 +/- 3db
Wireless	Bluetooth 2.1 + EDR spec
Operation	10 meters (33ft)
Battery	Polymer lithium battery 3.7V/1000mAh - 4 hours charging time
Playing time	10 hours on SD card

Storage and maintenance

- Store the headset in cool and dry place. The working temperature should be 0-45°C (32-113°F). Working in cold/hot environment or highly humid area will reduce the battery life.
- After storage for a long period, please charge the headset before using again.
- The headset is not water resistant. Do not put the headset into water.
- Clean the headset with a soft dry cloth.
- Do not bring the headset into contact with any sharp object.
- Do not leave the headset to extremely high or low temperature.

Note:


Design and specifications are subject to change without notice. For more information on the product, please visit www.soundSory.com

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Where is the serial code?

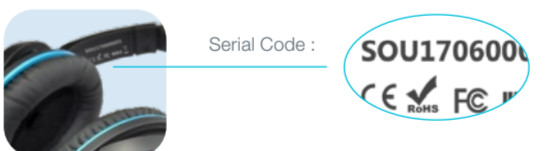

Precaution of use, limitations and disclaimer

SoundSory volume is set by default at a comfortable level for a majority of people. Feel free to adjust the volume for your comfort but do not turn it up too high. Children must use SoundSory under constant adult supervision and instruction. Do not use SoundSory more than 30 minutes a day. If you feel pain or discomfort, immediately stop using it. Resume using SoundSory once you feel well again. SoundSory is an electronic device, use it carefully. SoundSory is a pedagogical device. It is not approved by Federal Drug Administration. It cannot be considered as a medical device.

How to contact us?

SOUND FOR LIFE LTD
Unit 507, 5/F,
Chinachem Golden Plaza, 77 Mody Road,
Tsim Sha Tsui East, Kowloon, Hong Kong

Note:

If you need to return a product under warranty, please send a detailed explanation of the problem to info@soundSory.com and wait for the instructions.



SOUNDSORY®


About

SoundSory® is a sound based intervention embedded in a proprietary headphone equipped with Bone Conduction to develop sensory integration and establish core foundations. The specific rhythmic music is electronically processed to stimulate body movement and highlight the Attention Mechanisms in the brain as well as all cognitive functions. SoundSory is a 20 hours program delivered in only 40 days through 30 minutes sessions. Each day includes around 25 minutes of modified Music and maximum 5 minutes of Movement exercises. The program can be repeated for a deeper integration.

Part description



Accessories

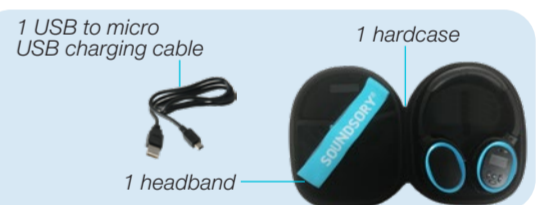

Features

- Power on/off - Play/pause - Backwards/Forwards - Volume up/down
- Bluetooth mode / TF = SD card mode / Program mode
- Battery status on the screen and battery low signal (2 seconds of 4 bips every 10 minutes)
- Program in TF mode : Day named from 1.1 to 40.2
- Track name and remaining playing time of track
- Automatic switch off without Bluetooth connection for 10 minutes

How to wear it



How to charge

Connect SoundSory to a standard USB port on your PC or a wall charger via the USB charging cable. SoundSory will fully charge within around 4 hours. The bar indicator will show a bar movement when charging and will turn fixed charging bars when charging is completed.

Charge Indication

Representation	Status
1 bar	Low battery. Headphone should be charged
4 flashing bars	Headphone is in charge
4 fixed bars	Headphone is full charged

Troubleshooting

Issue	Possible Problem	Resolution
Does not turn on	Check if the battery is fully charged	Charge the battery
Do not hear sound	Check the volume status	Switch the device off and on again to reset the default volume
Sound is too loud	Check the volume level	Decrease the volume by using volume + -> button or switch off and on the device.

Specifications

Model	TS1 bluetooth stereo headphone
Speaker	Diameter 40mm Impedance 32 ohm sensitivity 115db+/-3db SPL @1Khz
Response frequency	20-20KHz
Microphone	Microphone diameter 4.5*2.2 mm impedance 2.2K
Bone Conduction	Dual suspension BC. Sensitivity 100 +/- 3db
Wireless	Bluetooth 2.1 + EDR spec
Operation	10 meters (33ft)
Battery	Polymer lithium battery 3.7V/1000mAh - 4 hours charging time
Playing time	10 hours on SD card

Storage and maintenance

- Store the headset in cool and dry place. The working temperature should be 0-45°C (32-113°F). Working in cold/hot environment or highly humid area will reduce the battery life.
- After storage for a long period, please charge the headset before using again.
- The headset is not water resistant. Do not put the headset into water.
- Clean the headset with a soft dry cloth.
- Do not bring the headset into contact with any sharp object.
- Do not leave the headset to extremely high or low temperature.

Note:


Design and specifications are subject to change without notice. For more information on the product, please visit www.soundSory.com

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Where is the serial code?

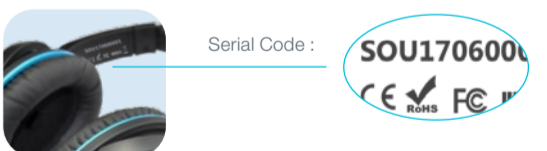

Precaution of use, limitations and disclaimer

SoundSory volume is set by default at a comfortable level for a majority of people. Feel free to adjust the volume for your comfort but do not turn it up too high. Children must use SoundSory under constant adult supervision and instruction. Do not use SoundSory more than 30 minutes a day. If you feel pain or discomfort, immediately stop using it. Resume using SoundSory once you feel well again. SoundSory is an electronic device, use it carefully. SoundSory is a pedagogical device. It is not approved by Federal Drug Administration. It cannot be considered as a medical device.

How to contact us?

SOUND FOR LIFE LTD
Unit 507, 5/F,
Chinachem Golden Plaza, 77 Mody Road,
Tsim Sha Tsui East, Kowloon, Hong Kong

Note:

If you need to return a product under warranty, please send a detailed explanation of the problem to info@soundSory.com and wait for the instructions.

